

Works for Jandorf Lamp Nipples:

- #60160 - Assorted 1/8 IP – Yellow Zinc:
 - 2 – 1/2" Lamp Nipples 1/8 IP
 - 2 – 1" Lamp Nipples 1/8 IP
 - 2 – 1 1/2" Lamp Nipples 1/8 IP
 - 2 – 2" Lamp Nipples 1/8 IP
- #60161 - Assorted 1/4 IP – Zinc Plated:
 - 1 – 3/4" Lamp Nipple 1/4 IP
 - 1 – 1 1/2" Lamp Nipple 1/4 IP
 - 1 – 2" Lamp Nipple 1/4 IP
- #60162 - 3" 1/8 IP Lamp Nipple – Yellow Zinc
- #60163 - 4" 1/8 IP Lamp Nipple – Yellow Zinc
- #60164 - 6" 1/8 IP Lamp Nipple – Yellow Zinc
- #60171 - 5" 1/8 IP Lamp Nipple – Yellow Zinc
- #60172 - 8" 1/8 IP Lamp Nipple – Yellow Zinc
- #60173 - 2 1/2" 1/4 IP Lamp Nipple – Zinc Plated
- #60174 - 3" 1/4 IP Lamp Nipple – Zinc Plated
- #60175 - 3 1/2" 1/4 IP Lamp Nipple – Zinc Plated

What's Its Purpose

Repairing or making lighting fixtures and lamps.

Works for Jandorf Hex Nuts & Locknuts:

- #60167 - Assorted Hex Nuts – Steel:
 - 4 – 8/32 Hex Nuts
 - 2 – 1/4-27 Hex Nuts
 - 6 – 1/8 IP Hex Nuts
 - 2 – 1/4 IP Hex Nuts
 - 2 – 3/8 IP Hex Nuts
- #60168 - Assorted Locknuts – Solid Brass:
 - 2 – 1/4-27 Knurled Locknuts
 - 2 – 1/8 IP Knurled Locknuts
 - 2 – 1/4 IP Knurled Locknuts
 - 4 – 1/8 IP Hex Nuts
 - 2 – 8/32 Battery Nuts
- #60169 - 1/8 IP Hex Nuts – Solid Brass
- #60170 - 1/8 IP Hex Nuts – Steel

What's Its Purpose

Holding connecting parts in place.

Works for Jandorf Check Rings:

- #60140 - Assorted Check Rings for 1/8" IP Lamp Nipple – Brass Finish

What's Its Purpose

Decorative highlight to cover opening.

Works for Jandorf Couplings:

- #60144 - 1/8 IP X 1/8 IP Couplings – Brass Finish
- #60149 - 1/4 IP X 1/4 IP Coupling – Brass Finish
- #60150 - 1/4 IP X 1/8 IP Coupling – Brass Finish

What's Its Purpose

Decorative piece that connects nipples of different sizes together.

Works for Jandorf Reducers:


- #60145 - 1/8 M X 1/4-27 F Reducer – Brass Finish
- #60146 - 1/4 M X 1/8 F Reducer – Brass Finish
- #60147 - 3/8 M X 1/4 F Reducer – Brass Finish
- #60148 - 3/8 M X 1/8 F Reducer – Brass Finish
- #60151 - 3/8 F X 1/8 F Reducer – Brass Finish

What's Its Purpose

Connects nipples of different sizes.


Warning

- Before beginning **TURN OFF POWER** to light from fuse or circuit breaker, or unplug lamp from wall outlet.
- Follow local electrical regulations or codes when installing and using this product.

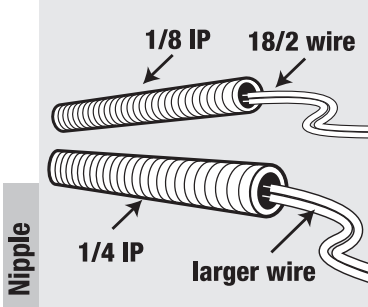


Nipple

If using 1/8 IP nipple, use with 18/2 wire.
For larger wire use 1/4 IP nipple.

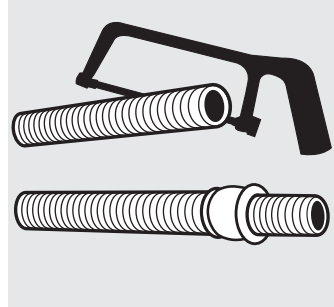


Lamp nipple can be used as is, cut to size or connected with coupling or reducer.

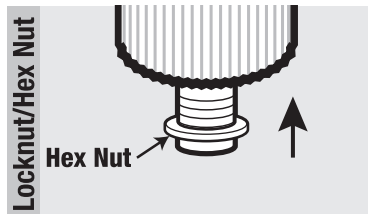


Locknut/Hex Nut

Thread hex nut (or locknut) onto one end of a nipple, leaving enough room at tip for a connecting part. Thread a connecting part (like a reducer, coupling, or bottle adapter) onto the nipple. Tighten hex nut (or locknut) and connecting part.

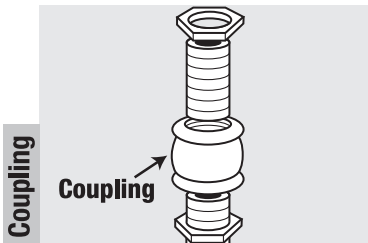


Coupling

Thread coupling onto nipple. Thread a second nipple into the other side of the coupling, joining the two nipples together. Secure with locknuts.

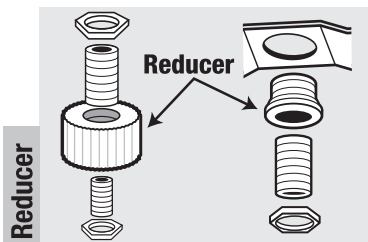

Reducer

Thread reducer onto nipple or other part. Thread a second nipple into the other side of the reducer, joining the two parts together. Secure with locknuts.

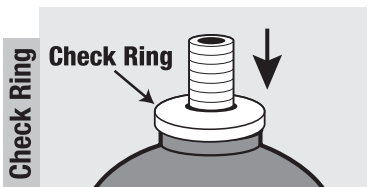

Check Ring

Slide check ring over lamp nipple to cover opening.

Overview

